


## Adaptadores para conexiones de mangueras

### Codo 45° rosca macho UNF asiento JIC 37° a rosca macho NPTF

**D0507**

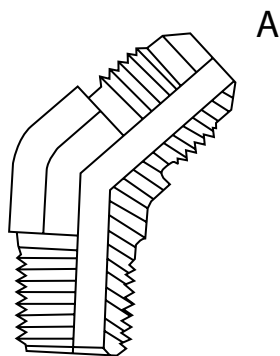


**B**  
Material Hierro Zincado

N° CODIGO	Ø Exterior Tubo	TAMAÑO DE LA ROSCA	
		A/JIC	B/NPTF
02-02	1/8"	5/16"-24	1/8"-27
03-02	3/16"	3/8"-24	1/8"-27
04-02	1/4"	7/16"-20	1/8"-27
04-04	1/4"	7/16"-20	1/4"-18
05-02	5/16"	1/2"-20	1/8"-27
05-04	5/16"	1/2"-20	1/4"-18
06-02	3/8"	9/16"-18	1/8"-27
06-04	3/8"	9/16"-18	1/4"-18
06-06	3/8"	9/16"-18	3/8"-18
06-08	3/8"	9/16"-18	1/2"-14
08-04	1/2"	3/4"-16	1/4"-18
08-06	1/2"	3/4"-16	3/8"-18
08-08	1/2"	3/4"-16	1/2"-14
08-12	1/2"	3/4"-16	3/4"-14
10-06	5/8"	7/8"-14	3/8"-18
10-08	5/8"	7/8"-14	1/2"-14
10-12	5/8"	7/8"-14	3/4"-14
12-08	3/4"	1 1/16"-12	1/2"-14
12-12	3/4"	1 1/16"-12	3/4"-14
14-12	7/8"	1 3/16"-12	3/4"-14
16-12	1"	1 5/16"-12	3/4"-14
16-16	1"	1 5/16"-12	1"-11 1/2
20-16	1 1/4"	1 5/8"-12	1"-11 1/2
20-20	1 1/4"	1 5/8"-12	1 1/4"-11 1/2
24-24	1 1/2"	1 7/8"-12	1 1/2"-11 1/2
32-32	2"	2 1/2"-12	2"-11 1/2

### Codo 90° rosca macho UNF asiento JIC 37° a rosca macho UNF asiento JIC 37°

**D0508**

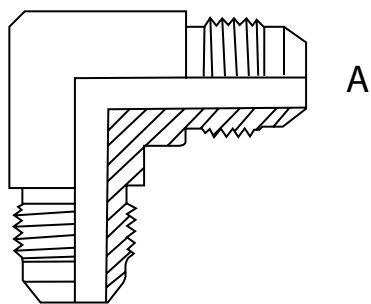

**B**  
Material Hierro Zincado

N° CODIGO	Ø Exterior Tubo	TAMAÑO DE LA ROSCA	
		A/JIC	B/JIC
02-02	1/8"	5/16"-24	5/16"-24
03-03	3/16"	3/8"-24	3/8"-24
04-04	1/4"	7/16"-20	7/16"-20
05-05	5/16"	1/2"-20	1/2"-20
06-06	3/8"	9/16"-18	9/16"-18
08-08	1/2"	3/4"-16	3/4"-16
10-10	5/8"	7/8"-14	7/8"-14
12-12	3/4"	1 1/16"-12	1 1/16"-12
14-14	7/8"	1 3/16"-12	1 3/16"-12
16-16	1"	1 5/16"-12	1 5/16"-12
20-20	1 1/4"	1 5/8"-12	1 5/8"-12
24-24	1 1/2"	1 7/8"-12	1 7/8"-12
32-32	2"	2 1/2"-12	2 1/2"-12

"Poberaj SA se reserva el derecho de modificar las características y medidas de sus productos sin previo aviso".  
ue sus productos sin previo aviso .

**PENSAMOS EN SEGURIDAD**  
TRAZABILIDAD



CONSULTE NUESTRAS BASES DE SERVICIOS